


82253 ASSEMBLY INSTRUCTION

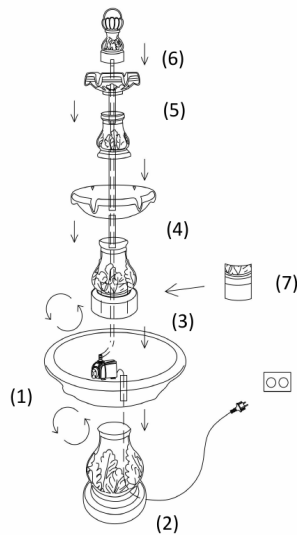

Please read the assembly and operating instructions carefully and observe the safety instructions. Keep these details in a safe place for future reference.

ASSEMBLY

- * Assemble components as per the diagram below on a smooth surface to avoid scratching
- * Go pump cord through stand pipe and pedestal, twist and lock the bowl to the pedestal (1)
- * Align the cord with groove on base(2)
- * Connect the tubing to pump, and "Twist and lock" the riser to the bowl(3)
- * Go tubing up to riser and 2nd bowl and slip fit the 2nd bowl into place (4)
- * Go tubing up to 2nd riser and slip fit the 2nd riser into place (5)
- * Connect the tubing to outlet of top feature and set the top into place (6)
- * The pump flow can be adjusted with the regulator, this is usually found on the inlet of the pump.
We recommend starting with the regulator full open and then adjusting down if required
- * Ensure that any wires are not tangled or trapped when assembling the components
- * Attach the cap to cover the pipe in the top of the large basin which the plug cord runs through to the base of the pedestal. **IMPORTANT** This will insure that there is no leaking down this pipe.
- * Fill the feature with sufficient water to fully submerge the pump
- * The access door (7) can be slid into place.
- * Connect the plug to your mains outlet. If outdoors the outlet must be waterproof.
- * If in doubt about any electrical connections please consult a qualified electrician

IMPORTANT CARE NOTICE

- * Fill the fountain with sufficient water to ensure the pump is well submerged.
- * Clean and top-up the water on a regular basis.
- * Always shut off the power before cleaning and maintaining the pump.
- * Never allow the fountain pump to run dry as this will cause damage and invalidate the warranty.
- * It's not recommended to leave the fountain running constantly. We suggest turning the fountain on/off when required.

WINTER CARE(when fountain is used outdoor)

- * During winter never allow ice to form in the bowls as the force of the ice forming will crack the bowls. Drain the fountain and store indoors.
- * The pump should be disconnected from the main supply, removed from the fountain and cleaned in the following way:
 - (a) remove the inlet cover from the front of the pump and gently grip the impeller to pull out the rotor assembly from the pump
 - (b) clean the rotor and rotor housing with water then dry with kitchen paper
 - (c) reassemble the parts and store the pump in dry area

TROUBLESHOOTING

If the water pump fails to operate, check the following:

1. If the pump cannot pump water check if the power is correctly connected or check if sufficient water is inside the reservoir.
 - (a) Check the pump and tubing for any form of obstructions.
 - (b) Remove the cover with the pump flow adjuster on it and gently lever off the inner cover to reveal the pump impeller and gently turn the rotor to check that it is not broken or jammed.
2. If the pump runs with slow water circulation check the following:
 - (a) The flow control on the body of the pump.
 - (b) Ensure the pump is completely submersed.
3. If any abnormal sound is heard during the pump operation, turn off the power supply and check the rotor assembly as follows:
 - (a) Remove the pump cover and rotor plate from the front.
 - (b) Grip the impeller and gently take out the rotor assembly from the pump.
 - (c)Rinse the motor assembly and the housing with clean water in order to remove any grit or debris.
 - (d) If any breakage or surface damage is found on the rotor assembly, pls contact you supplier, if replacement needed.

We hope you continue to enjoy you water feature for many years. Over time the paint finish will gradually mellow in color, this is part of the natural weathering process.

82253

KOKOAMISOHJE

Lue kokoamis- ja käyttöohjeet huolellisesti ja noudata turvallisuusohjeita.
Säilytä nämä tiedot tulevaa tarvetta varten.

KOKOAMINEN

- * Kokoa osat alla olevan kaavion mukaisesti tasaisella pinnalla, jotta naarmuja ei synny.
 - * Vie pumpun johto jalustaputken ja jalustan läpi, kierrä ja lukitse kulho jalustaan (1).
 - * Kohdista johto jalustan uran kanssa (2).
 - * Liitä letku pumppuun ja kierrä sekä lukitse nousuputki kulhoon (3).
 - * Vie letku ylös nousuputkeen ja toiseen kulhoon ja aseta kulho paikalleen (4).
 - * Vie letku toiseen nousuputkeen ja aseta se paikalleen (5).
 - * Liitä letku ylimmän osan ulostuloon ja aseta yläosa paikalleen (6).
 - * Pumpun virtausta voidaan säätää säätimellä, joka löytyy yleensä pumpun sisääntulosta. Suosittelemme aloittamaan täysin auki-asennosta ja säätämään alaspäin tarpeen mukaan.
 - * Varmista, etteivät johdot ole sotkeutuneet tai jääneet puristuksiin kokoamisen aikana.
 - * Kiinnitä korkki peittämään suuriin kulhoon menevä putki, jota kautta virtajohto kulkee jalustaan.
- TÄRKEÄÄ: Tämä estää veden vuotamisen putkea pitkin.
- * Täytä allas riittävällä vedellä, jotta pumppu peittyy kokonaan.
 - * Liu'uta huolto-ovi (7) paikalleen.
 - * Kytke pistoke pistorasiaan. Jos käytät ulkona, pistorasian tulee olla vedenpitävä.
 - * Jos olet epävarma sähköliitännöistä, ota yhteyttä pätevään sähköasentajaan.

TÄRKEÄ HOITO-OHJE

- * Täytä suihkulähde riittävällä vedellä varmistaaksesi, että pumppu on kunnolla upotettu.
- * Puhdista ja lisää vettä säännöllisesti.
- * Katkaise virta aina ennen pumpun puhdistusta ja huoltoa.
- * Älä koskaan anna pumpun käydä kuivana, sillä tämä aiheuttaa vahinkoa ja mitätöi takuun.
- * Ei ole suositeltavaa pitää suihkulähdettä käynnissä jatkuvasti. Suosittelemme, että käytät sitä tarpeen mukaan.

TALVIHOITO (kun suihkulähdettä käytetään ulkona)

- * Talvella älä koskaan anna jään muodostua kulhoihin, sillä jää voi rikkoa ne. Tyhjennä suihkulähde ja säilytä sisätiloissa.
- * Pumppu tulee irrottaa sähköverkosta, poistaa suihkulähteestä ja puhdistaa seuraavasti:
 - (a) Irrota pumpun etukansi ja vedä roottorikokoonpano varovasti ulos juoksupyörästä kiinni pitäen.
 - (b) Puhdista roottori ja sen kotelo vedellä ja kuivaa talouspaperilla.
 - (c) Kokoa pumppu uudelleen ja säilytä kuivassa paikassa.

VIANMÄÄRITYS

Jos vesipumppu ei toimi, tarkista seuraavat seikat:

1. Jos pumppu ei pumpkaa vettä, tarkista, että virta on kytketty oikein ja että säiliössä on riittävästi vettä.

(a) Tarkista pumppu ja letkut mahdollisten tukosten varalta.

(b) Irrota pumpun virtaussäätimellä varustettu kansi ja nosta sisäkansi esiin nähdäksesi juoksupyörän.

Käännä roottoria varovasti tarkistaaksesi, ettei se ole rikki tai jumissa.

2. Jos pumppu toimii, mutta veden kierto on heikko, tarkista:

(a) Pumpun rungossa oleva virtaussäädin.

(b) Varmista, että pumppu on täysin upotettu.

3. Jos pumpusta kuuluu epänormaalia ääntä käytön aikana, katkaise virta ja tarkista roottori seuraavasti:

(a) Irrota pumpun kansi ja roottorilevy edestä.

(b) Ota kiinni juoksupyörästä ja poista roottorikokoonpano varovasti pumpusta.

(c) Huuhtelee moottorikokoonpano ja kotelo puhtaalla vedellä hiekan tai lian poistamiseksi.

(d) Jos roottorissa havaitaan rikkoutumista tai pintavaurioita, ota yhteyttä toimittajaasi, jos vaihtoa tarvitaan.

Toivomme, että nautit vesiaiheestasi monia vuosia. Ajan myötä maalipinta saattaa vähitellen haalistua – tämä on osa luonnollista säänkestoprosessia.