


82254

ASSEMBLY INSTRUCTION

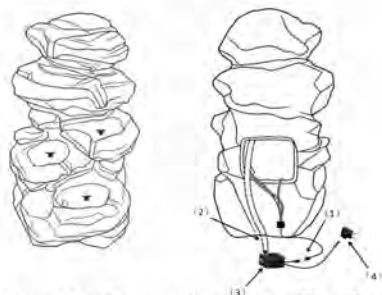

Please read the assembly and operating instructions carefully and observe the safety instructions.

Keep these details in a safe place for future reference.

ASSEMBLY

- * Assemble components as per the diagram above on a smooth surface to avoid scratching.
- * The LED lights are pre-installed, connect the two ends of LED light cord together and screw over the plastic collar. (1)
- * Connect the tube (2) from inside back cavity of the fountain to the pump (3). Then the pump to the transformer. (4)
- * Fill the feature with sufficient water to fully submerge the pump, we suggest 3/4 of bowl.
- * Connect the plug to your mains outlet.
- * If in doubt about any electrical connections please consult a qualified electrician.

IMPORTANT CARE NOTICE

- * Fill the fountain with sufficient water to ensure the pump is well submerged.
- * Clean and top-up the water on a regular basis.
- * Always shut off the power before cleaning and maintaining the pump.
- * Never allow the fountain pump to run dry as this will cause damage and invalidate the warranty.

TROUBLESHOOTING

If the water pump fails to operate, check the following:

1. If the pump cannot pump water check if the power is correctly connected or check if sufficient water is inside the reservoir.
 - (a) Check the pump and tubing for any form of obstructions.
 - (b) Remove the cover with the pump flow adjuster on it and gently lever off the inner cover to reveal the pump impeller and gently turn the rotor to check that it is not broken or jammed.
2. If the pump runs with slow water circulation check the following:
 - (a) The flow control on the body of the pump.
 - (b) Ensure the pump is completely submerged.
3. If any abnormal sound is heard during the pump operation, turn off the power supply and check the rotor assembly as follows:
 - (a) Remove the pump cover and rotor plate from the front.
 - (b) Grip the impeller and gently take out the rotor assembly from the pump.
 - (c) Rinse the motor assembly and the housing with clean water in order to remove any grit or debris.
 - (d) If any breakage or surface damage is found on the rotor assembly, please contact your supplier, if replacement needed.

We hope you continue to enjoy your water feature for many years. Over time the paint finish will gradually mellow in colour, this is part of the natural weathering process.

82254

KOKOAMISOHJE

Lue kokoamis- ja käyttöohjeet huolellisesti ja noudata turvallisuusohjeita.

Säilytä nämä tiedot tulevaa tarvetta varten.

KOKOAMINEN

- * Kokoa osat yllä olevan kaavion mukaisesti tasaisella pinnalla, jotta naarmuuntumista ei tapahdu.
- * LED-valot on esiasennettu. Yhdistä LED-valojohdon molemmat päät ja kierrä muovikaulus päälle. (1)
- * Liitä putki (2) suihkulähteen takakotelon sisältä pumppuun (3). Liitä sitten pumppu muuntajaan (4).
- * Täytä allas riittävällä vedellä niin, että pumppu peittyy kokonaan. Suosittelemme 3/4 kulhosta.
- * Kytke pistoke pistorasiaan.
- * Jos olet epävarma sähköliitännöistä, ota yhteyttä pätevään sähköasentajaan.

TÄRKEÄ HOITO-OHJE

- * Täytä suihkulähde riittävällä vedellä varmistaaksesi, että pumppu on kunnolla upotettu.
- * Puhdista ja lisää vettä säännöllisesti.
- * Katkaise virta aina ennen pumpun puhdistusta ja huoltoa.
- * Älä koskaan anna pumpun käydä kuivana, sillä tämä aiheuttaa vahinkoa ja mitätöi takuun.

VIANMÄÄRITYS

Jos vesipumppu ei toimi, tarkista seuraavat seikat:

1. Jos pumppu ei pumpkaa vettä, tarkista että virta on kytketty oikein tai että säiliössä on riittävästi vettä.

(a) Tarkista pumppu ja letku mahdollisten tukosten varalta.

(b) Irrota pumpun virtaussäätimellä varustettu kansi ja nosta varovasti sisäkansi esiin nähdäksesi pumpun juoksupyörän.

Käännä roottoria varovasti tarkistaaksesi, ettei se ole rikki tai jumissa.

2. Jos pumppu toimii mutta veden kierto on heikko, tarkista:

(a) Pumpun rungossa oleva virtaussäädin.

(b) Varmista, että pumppu on täysin upotettu veteen.

3. Jos pumpusta kuuluu epänormaalia ääntä käytön aikana, katkaise virta ja tarkista roottorikokoonpano seuraavasti:

(a) Irrota pumpun kansi ja roottorilevy edestä.

(b) Ota kiinni juoksupyörästä ja poista roottorikokoonpano varovasti pumpusta.

(c) Huuhtelee moottorikokoonpano ja kotelo puhtaalla vedellä hiekan tai lian poistamiseksi.

(d) Jos roottorikokoonpanossa havaitaan rikkoutumista tai pintavaurioita, ota yhteyttä toimittajaasi, jos vaihtoa tarvitaan.

Toivomme, että nautit vesiaiheestasi monia vuosia. Ajan myötä maalipinta saattaa vähitellen haalistua – tämä on osa luonnollista säänkestoprosessia.