
Flat Nylon Brush Kit for Pulsarlube OL500

Kit No. C030

DETAILED PARTS AND ASSEMBLY PROCEDURE

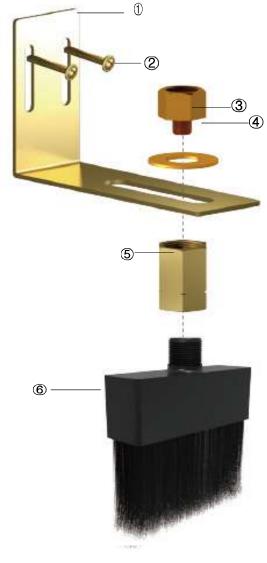

LIST	PART No.	DESCRIPTION	Q'TY
1	B003	Oil Brush Bracket	1
2	B051	Self Drilling Screws	2
3	A002	PT 3/8"F x PT 1/8"M Adapter	1
4	B057	Steel Washer	1
(5)	C012	PT 1/8"F x NPT 1/8"F Socket	1
6)	C001	2" Flat Nylon Brush (1/8" NPT)	1

ASSEMBLY PROCEDURE

- 1. Install the mounting bracket (1) in an appropriate location using the screws (2).
- 2. Fasten the adapter (3), washer (4), socket (5), and brush (6) in the

position along the slot of the bracket. Make sure the socket is assembled as

pictured. The line around the socket should be facing downward as that end

will connect to the NPT thread of the brush.

The other end of the socket is PT.

COMMENTS

- · Apply PTFE Tape around the thread of the brush (6).
- · Output volume may vary depending on oil viscosity, ambient temperature, etc.

Note: All parts above are Metric threa

① Pulsarlube USA, Inc.

Rev No. 140207

www.pulsarlube.com

① ② ③

(5) (6)